

**1****2****3**

1. Remove rear the cable gland parts (turn anti clockwise)
2. Remove the middle part (turn anti clockwise)
3. Remove the inner pin part (pull out)
4. Place cable through trough the gland parts and middle part (through parts 1+2)
5. Connect all separate wires
See pin numbers, functions and possible wire colors below
6. Build all together again in reversed order

Be sure to close it properly and firm to prevent water coming into the plug


Jäger system 13 pins

Pin	Function	Color
1	Left Indicator Light	Yellow
2	Rear Fog Light	Blue
3	Ground contacts 1 to 8	White
4	Right Indicator Light	Green
5	Taillight / front position lamp and number plate right	Brown
6	Brake Light	Red
7	Taillight/ front position lamp left	Black
8	Reversing lights	Grey
9	Permanent power wire interior lighting	Brown / blue
10	Charging cable for caravan battery / refrigerator	Brown / red
11	No destination (possibly mass)	White Red
12	No destination	White
13	Mass (for contacts 9 to 12)	White black



Connecting to car

- The plug is attached with a 90° rotatable 'bayonet' outer part
- Prior to plugging in: be sure that the outer rotatable part is at the right position (see below)

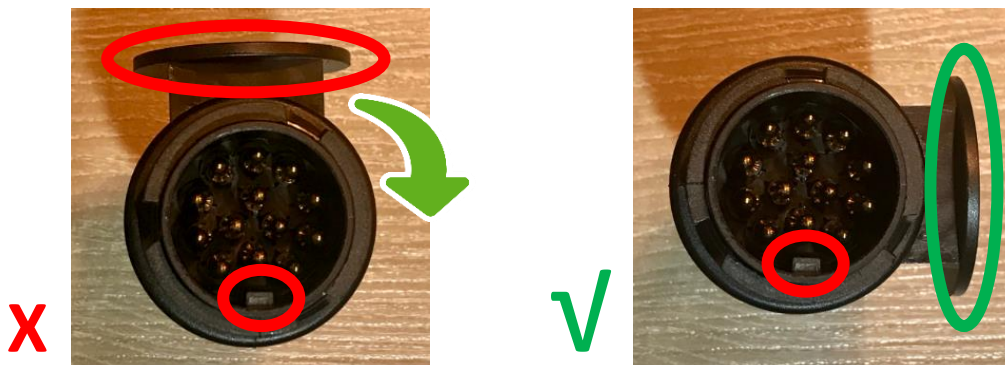

- Put the plug in the car plug and slowly rotate the outer part to the right while the plug moves in
- After 90° rotating the connector is attached and locked.

Always test all lights before driving!

Unplug? Rotate outer part counterclockwise while pulling out.