



Kia Ceed III SW ab 2018

Part Number: 10029s-a

Date: 25-11-2019

Sheet 1 of 4

© Copyright Windesa GmbH

ClimAir
ar omfort

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

GB Car darkening set doors Installation Instruction	N Bilvinduet missfarging dører Installasjonsveiledning
D Autoscheibenverdunklung Türen Einbauanleitung	S Bilrutan nyanserings dörrar Monteringsanvisning
E Ventana de coche puertas de tintado Instrucciones de instalación	SF Auton ikkunasta sävytystä ovet Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto tónování dveře Pokyny k instalaci
I Finestrino della macchina porte colorazione Istruzioni per l'installazione	H Autó Ablakszínezés ajtók Szerelési útmutató
P Portas tintométrico janelas do carro Instruções de instalação	PL Drzwi okienne samochod barwiących Instrukcje instalacji
NL Auto raam verven deuren Installatie-instructies	GR Παράθυρο του αυτοκινήτου πόρτες χρωματισμού Οδηγίες εγκατάστασης
DK Bil vindue toning døre Monteringsvejledning	RUS Окрашивание двери окна автомобиля Инструкция по монтажу



2 x



2x



SC4-40

2x



SC8-20

4x



SC6-40



Kia Ceed III SW ab 2018

Part Number: 10029s-b

Date: 25-11-2019

Sheet 1 of 4

© Copyright Windesa GmbH



PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

GB Car darkening set side windows Installation Instruction	N Missfarging sidevindu bilvindu Installasjonsveiledning
D Autoscheibenverdunklung Seitenfenster Einbauanleitung	S Nyanseringssidor bilfönster Monteringsanvisning
E Ventana lateral teñidos de ventana de coche Instrucciones de instalación	SF Auton ikkuna sävytystä sivuikkunan Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování side Pokyny k instalaci
I Finestra laterale colorazione della finestra di automobile Istruzioni per l'installazione	H Autó Ablakszínezés oldalablak Szerelési útmutató
P Janela lateral tintométrico janela do carro Instruções de instalação	PL Okno boczne okno barwienia samochod Instrukcje instalacji
NL Auto raam verven zijruit Installatie-instructies	GR Παράθυρο πλευρά χρωματισμού παράθυρο αυτοκινήτου Οδηγίες εγκατάστασης
DK Bil vindue vindue toning side Monteringsvejledning	RUS Сторона тонировка стекла Автостекло Инструкция по монтажу





2x



2x



SC8-20

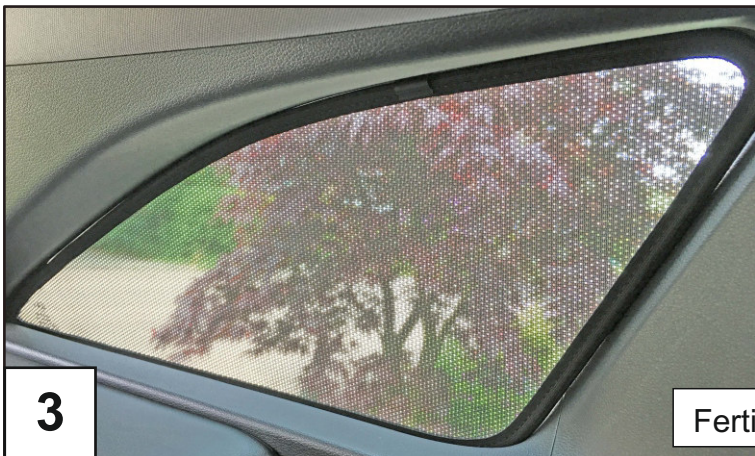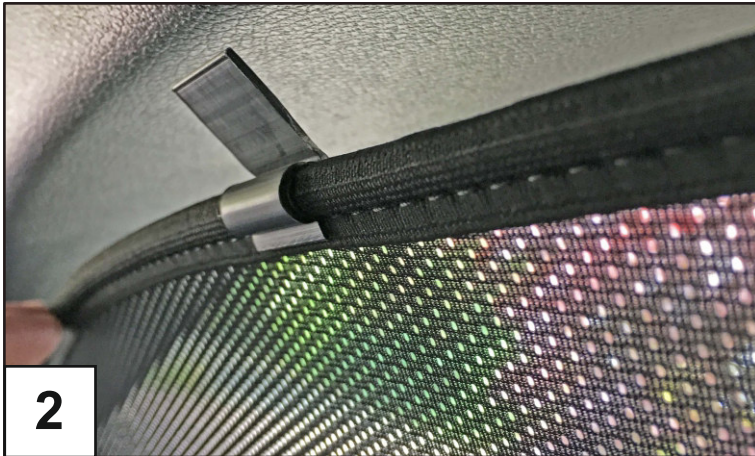

Fertig ✓



Kia Ceed III SW ab 2018

Part Number: 10029s-c

Date: 25-11-2019

Sheet 1 of 4

© Copyright Windesa GmbH

ClimAir
ar omfort

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben


GB Car darkening set rear window Installation Instruction	N Bilvinduet vindu missfarging bak Installasjonsveiledning
D Autoscheibenverdunklung Heckfenster Einbauanleitung	S Bilfönstret nyanser bakruta Monteringsanvisning
E Teñido de ventana trasera ventanilla del coche Instrucciones de instalación	SF Auton ikkuna sävytystä takalasin Asennusohjeet
F Fenêtre arrière teinter fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování zadních Pokyny k instalaci
I Finestra colorazione lunotto auto Istruzioni per l'installazione	H Autó Ablakszínezés hátsó ablak Szerelési útmutató
P Tingimento de janelas traseira janela do carro Instruções de instalação	PL Okna samochodu tylne okno barwienia Instrukcje instalacji
NL Autoruit raam verven achter Installatie-instructies	GR Παράθυρο του αυτοκινήτου φιμέ τζάμια πίσω Οδηγίες εγκατάστασης
DK Vindue toning bageste bil vindue Monteringsvejledning	RUS Окна автомобиля тонировка заднего стекла Инструкция по монтажу



1x



1x

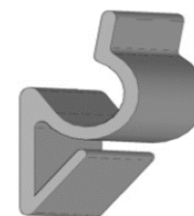

SC9-20

