



Skoda Kodiaq 2017-

ClimAir
car comfort

Part Number: 10060s-a

Date: 16-01-2020

Sheet 1 of 4

© Copyright Windesa GmbH

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

- GB** Car darkening set doors
Installation Instruction
- D** Autoscheibenverdunklung Türen
Einbauanleitung
- E** Ventana de coche puertas de tintado
Instrucciones de instalación
- F** Portes teinter fenêtre de voiture
Instructions d'installation
- I** Finestrino della macchina porte colorazione
Istruzioni per l'installazione
- P** Portas tintométrico janelas do carro
Instruções de instalação
- NL** Auto raam verven deuren
Installatie-instructies
- DK** Bil vindue toning døre
Monteringsvejledning


- N** Bilvinduet missfärging dörar
Installationsvejledning
- S** Bilrutan nyanserings dörrar
Monteringsanvisning
- SF** Auton ikkunasta sävytystä ovet
Asennusohjeet
- CZ** Okno auto tónování dveře
Pokyny k instalaci
- H** Autó Ablakszínezés ajtók
Szerelési útmutató
- PL** Drzwi okienne samochod barwiących
Instrukcje instalacji
- GR** Παράθυρο του αυτοκινήτου πόρτες χρωματισμού
Οδηγίες εγκατάστασης
- RUS** Окрашивание двери окна автомобиля
Инструкция по монтажу



2x




6x



SC3-40

2x



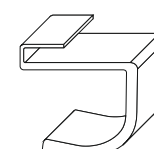


SC6-40

2x



SC8-10-10

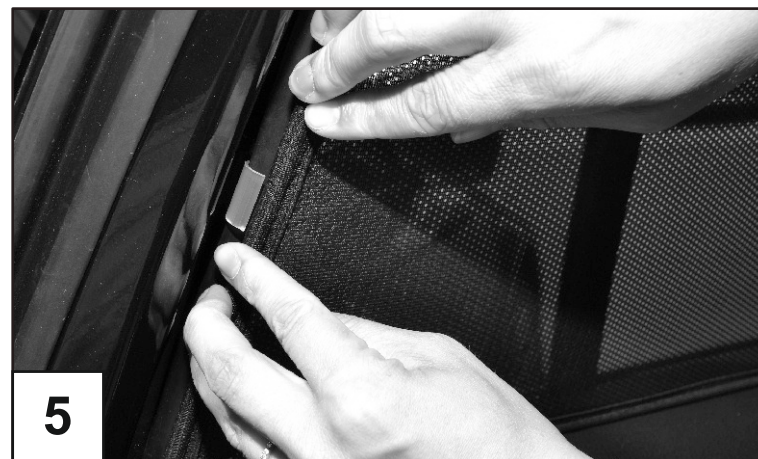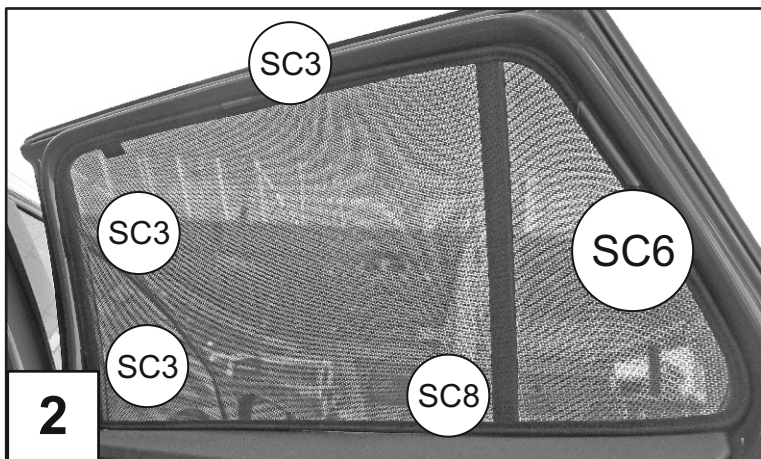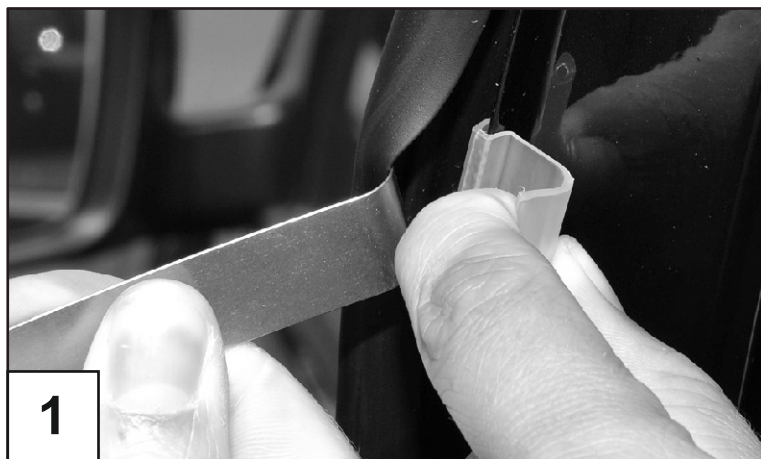

Skoda Kodiaq 2017-



Part Number: 10060s-b

Date: 16-01-2020

Sheet 1 of 4

© Copyright Windesa GmbH

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

GB Car darkening set side windows Installation Instruction	N Missfarging sidevindu bilvinduét Installasjonsveiledning
D Autoscheibenverdunklung Seitenfenster Einbauanleitung	S Nyanseringssidor bilfönster Monteringsanvisning
E Ventana lateral teñidos de ventana de coche Instrucciones de instalación	SF Auton ikkuna sävytystä sivuikkunan Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování side Pokyny k instalaci
I Finestra laterale colorazione della finestra di automobile Istruzioni per l'installazione	H Autó Ablakszínezés oldalablak Szerelési útmutató
P Janela lateral tintométrico janela do carro Instruções de instalação	PL Okno boczne okno barwienia samochod Instrukcje instalacji
NL Auto raam verven zijruit Installatie-instructies	GR Παράθυρο πλευρά χρωματισμού παράθυρο αυτοκινήτου Οδηγίες εγκατάστασης
DK Bil vindue vindue toning side Monteringsvejledning	RUS Сторона тонировка стекла Автостекло Инструкция по монтажу




2 x



2x



SC8-20

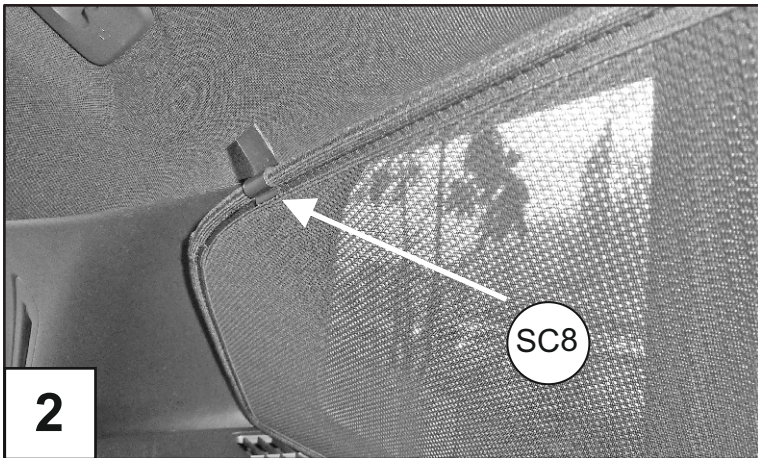



Skoda Kodiaq 2017-

Part Number: 10060s-c

Date: 16-01-2020

Sheet 1 of 4

© Copyright Windesa GmbH

ClimAir
car comfort

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

- GB** Car darkening set rear window
Installation Instruction
- D** Autoscheibenverdunklung Heckfenster
Einbauanleitung
- E** Teñido de ventana trasera ventanilla del coche
Instrucciones de instalación
- F** Fenêtre arrière teinter fenêtre de voiture
Instructions d'installation
- I** Finestra colorazione lunotto auto
Istruzioni per l'installazione
- P** Tingimento de janelas traseira janela do carro
Instruções de instalação
- NL** Autoruit raam verven achter
Installatie-instructies
- DK** Vindue toning bageste bil vindue
Monteringsvejledning


- N** Bilvinduett vindu missfarging bak
Installasjonsveiledning
- S** Bilfönstret nyanser bakruta
Monteringsanvisning
- SF** Auton ikkuna sävytystä takalasin
Asennusohjeet
- CZ** Okno auto okno tónování zadních
Pokyny k instalaci
- H** Autó Ablakszínezés hátsó ablak
Szerelési útmutató
- PL** Okna samochodu tylne okno barwienia
Instrukcje instalacji
- GR** Παράθυρο του αυτοκινήτου φινιρ τζάμια πίσω
Οδηγίες εγκατάστασης
- RUS** Окна автомобиля тонировка заднего стекла
Инструкция по монтажу



1x



2x

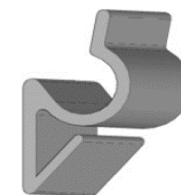

SC9-20

