

Dacia Sandero II, 2013-



PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

Part Number: 10087s-a

Date: 18-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH

- GB** Car darkening set doors
Installation Instruction
- D** Autoscheibenverdunklung Türen
Einbauanleitung
- E** Ventana de coche puertas de tintado
Instrucciones de instalación
- F** Portes teinter fenêtre de voiture
Instructions d'installation
- I** Finestrino della macchina porte colorazione
Istruzioni per l'installazione
- P** Portas tintométrico janela do carro
Instruções de instalação
- NL** Auto raam verven deuren
Installatie-instructies
- DK** Bil vindue toning døre
Monteringsvejledning


- N** Bilvinduet missfarging dører
Installasjonsveiledning
- S** Bilrutan nyanserings dörrar
Monteringsanvisning
- SF** Auton ikkunasta sävytystä ovet
Asennusohjeet
- CZ** Okno auto tónování dveře
Pokyny k instalaci
- H** Autó Ablakszínezés ajtók
Szerelési útmutató
- PL** Drzwi okienne samochod barwiących
Instrukcje instalacji
- GR** Παράθυρο του αυτοκινήτου πόρτες χρωματισμού
Οδηγίες εγκατάστασης
- RUS** Окрашивание двери окна автомобиля
Инструкция по монтажу




2 x



8x

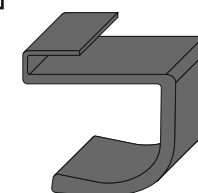

SC6-40

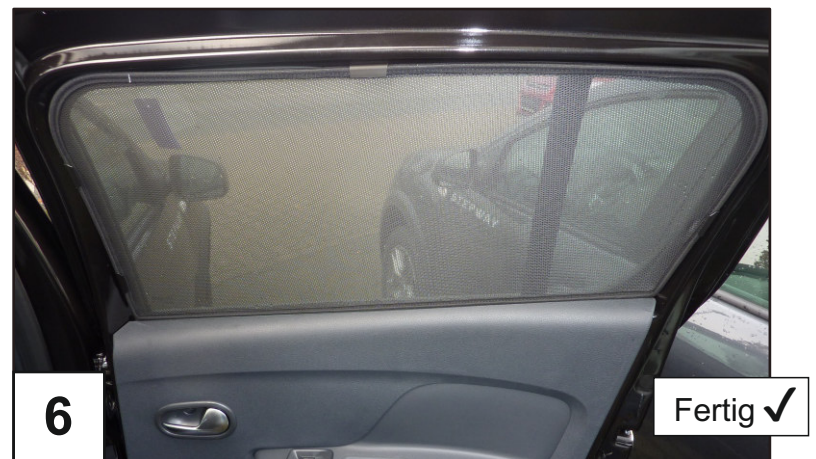

Dacia Sandero II, 2013-

Part Number: 10087s-c

Date: 19-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH



PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

- GB** Car darkening set rear window
Installation Instruction
- D** Autoscheibenverdunklung Heckfenster
Einbauanleitung
- E** Teñido de ventana trasera ventanilla del coche
Instrucciones de instalación
- F** Fenêtre arrière teinter fenêtre de voiture
Instructions d'installation
- I** Finestra colorazione lunotto auto
Istruzioni per l'installazione
- P** Tingimento de janel traseira janela do carro
Instruções de instalação
- NL** Autoruit raam verven achter
Installatie-instructies
- DK** Vindue toning bageste bil vindue
Monteringsvejledning


- N** Bilvinduet vindu missfarging bak
Installasjonsveiledning
- S** Bilfönstret nyanser bakruta
Monteringsanvisning
- SF** Auton ikkuna sävytystä takalasin
Asennusohjeet
- CZ** Okno auto okno tónování zadních
Pokyny k instalaci
- H** Autó Ablakszínezés hátsó ablak
Szerelési útmutató
- PL** Okna samochodu tylne okno barwienia
Instrukcje instalacji
- GR** Παράθυρο του αυτοκινήτου φιμέ τζάμια πίσω
Οδηγίες εγκατάστασης
- RUS** Окна автомобиля тонировка заднего стекла
Инструкция по монтажу



1 x



2 x

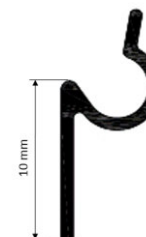

SC8-20-10

