

Skoda Octavia III, Typ 5E

Part Number: 10091s-a

Date: 20-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH



PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

GB Car darkening set doors Installation Instruction	N Bilvinduet missfarging dører Installasjonsveiledning
D Autoscheibenverdunklung Türen Einbauanleitung	S Bilrutan nyanserings dörrar Monteringsanvisning
E Ventana de coche puertas de tintado Instrucciones de instalación	SF Auton ikkunasta sävytystä ovet Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto tónování dveře Pokyny k instalaci
I Finestrino della macchina porte colorazione Istruzioni per l'installazione	H Autó Ablakszínezés ajtók Szerelési útmutató
P Portas tintométrico janelas do carro Instruções de instalação	PL Drzwi okienne samochod barwiących Instrukcje instalacji
NL Auto raam verven deuren Installatie-instructies	GR Παράθυρο του αυτοκινήτου πόρτες χρωματισμού Οδηγίες εγκατάστασης
DK Bil vindue toning døre Monteringsvejledning	RUS Окрашивание двери окна автомобиля Инструкция по монтажу



2x



8x





SC3-40

4x



SC6-40

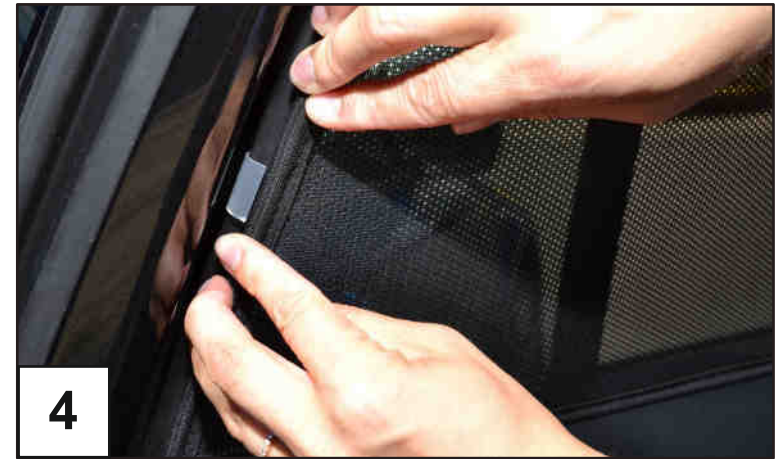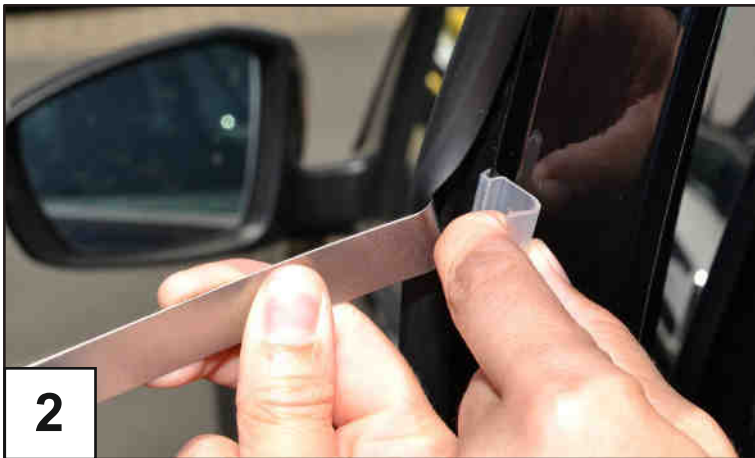

Skoda Octavia III, Typ 5E

Part Number: 10091s-b

Date: 20-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH



PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

- GB** Car darkening set side windows
Installation Instruction
- D** Autoscheibenverdunklung Seitenfenster
Einbauanleitung
- E** Ventana lateral teñidos de ventana de coche
Instrucciones de instalación
- F** Portes teinter fenêtre de voiture
Instructions d'installation
- I** Finestra laterale colorazione della finestra di automobile
Istruzioni per l'installazione
- P** Janela lateral tintométrico janela do carro
Instruções de instalação
- NL** Auto raam verven zijruit
Installatie-instructies
- DK** Bil vindue vindue toning side
Monteringsvejledning


- N** Missfarging sidevindu bilvindu
Installasjonsveiledning
- S** Nyanseringssidor bilfönster
Monteringsanvisning
- SF** Auton ikkuna sävytystä sivuikkunan
Asennusohjeet
- CZ** Okno auto okno tónování side
Pokyny k instalaci
- H** Autó Ablakszínezés oldalablak
Szerelési útmutató
- PL** Okno boczne okno barwienia samochod
Instrukcje instalacji
- GR** Παράθυρο πλευρά χρωματισμού παράθυρο αυτοκινήτου
Οδηγίες εγκατάστασης
- RUS** Сторона тонировка стекла Автостекло
Инструкция по монтажу




2x




2x

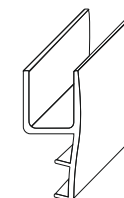

SC2-50

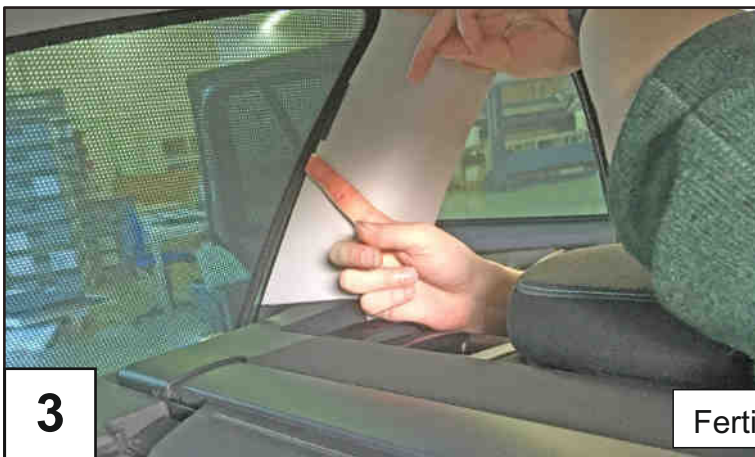

Fertig ✓

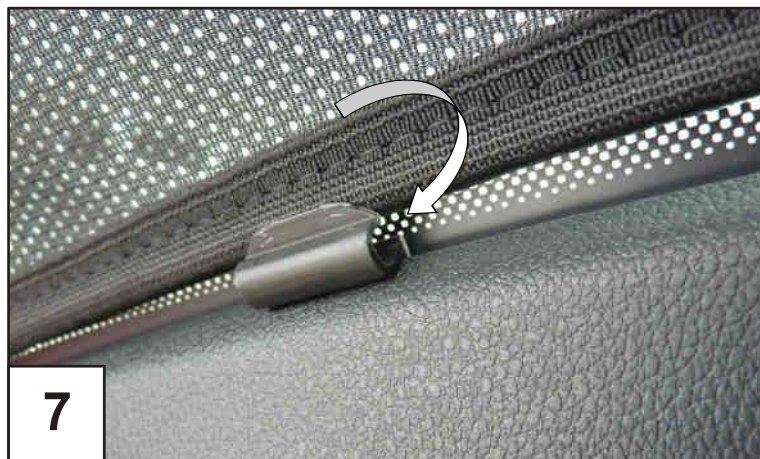

Skoda Octavia III, Typ 5E

Part Number: 10091s-c

Date: 20-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH

ClimAir
ar omfort

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben


GB Car darkening set rear window Installation Instruction	N Bilvinduet vindu missfarging bak Installasjonsveiledning
D Autoscheibenverdunklung Heckfenster Einbauanleitung	S Bilfönstret nyanser bakruta Monteringsanvisning
E Teñido de ventana trasera ventanilla del coche Instrucciones de instalación	SF Auton ikkuna sävytystä takalasin Asennusohjeet
F Fenêtre arrière teinter fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování zadních Pokyny k instalaci
I Finestra colorazione lunotto auto Istruzioni per l'installazione	H Autó Ablakszínezés hátsó ablak Szerelési útmutató
P Tingimento de janela traseira janela do carro Instruções de instalação	PL Okna samochodu tylne okno barwienia Instrukcje instalacji
NL Autoruit raam verven achter Installatie-instructies	GR Παράθυρο του αυτοκινήτου φινιρέ τζάμια πίσω Οδηγίες εγκατάστασης
DK Vindue toning bageste bil vindue Monteringsvejledning	RUS Окна автомобиля тонировка заднего стекла Инструкция по монтажу



1x



2x

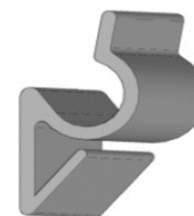

SC9-20

