
MOUNTING INSTRUCTION
SPOILER

PACKAGE CONTENT	QUANTITY
○ SPOILER	1
○ PRIMER HANDKERCHIEF	1

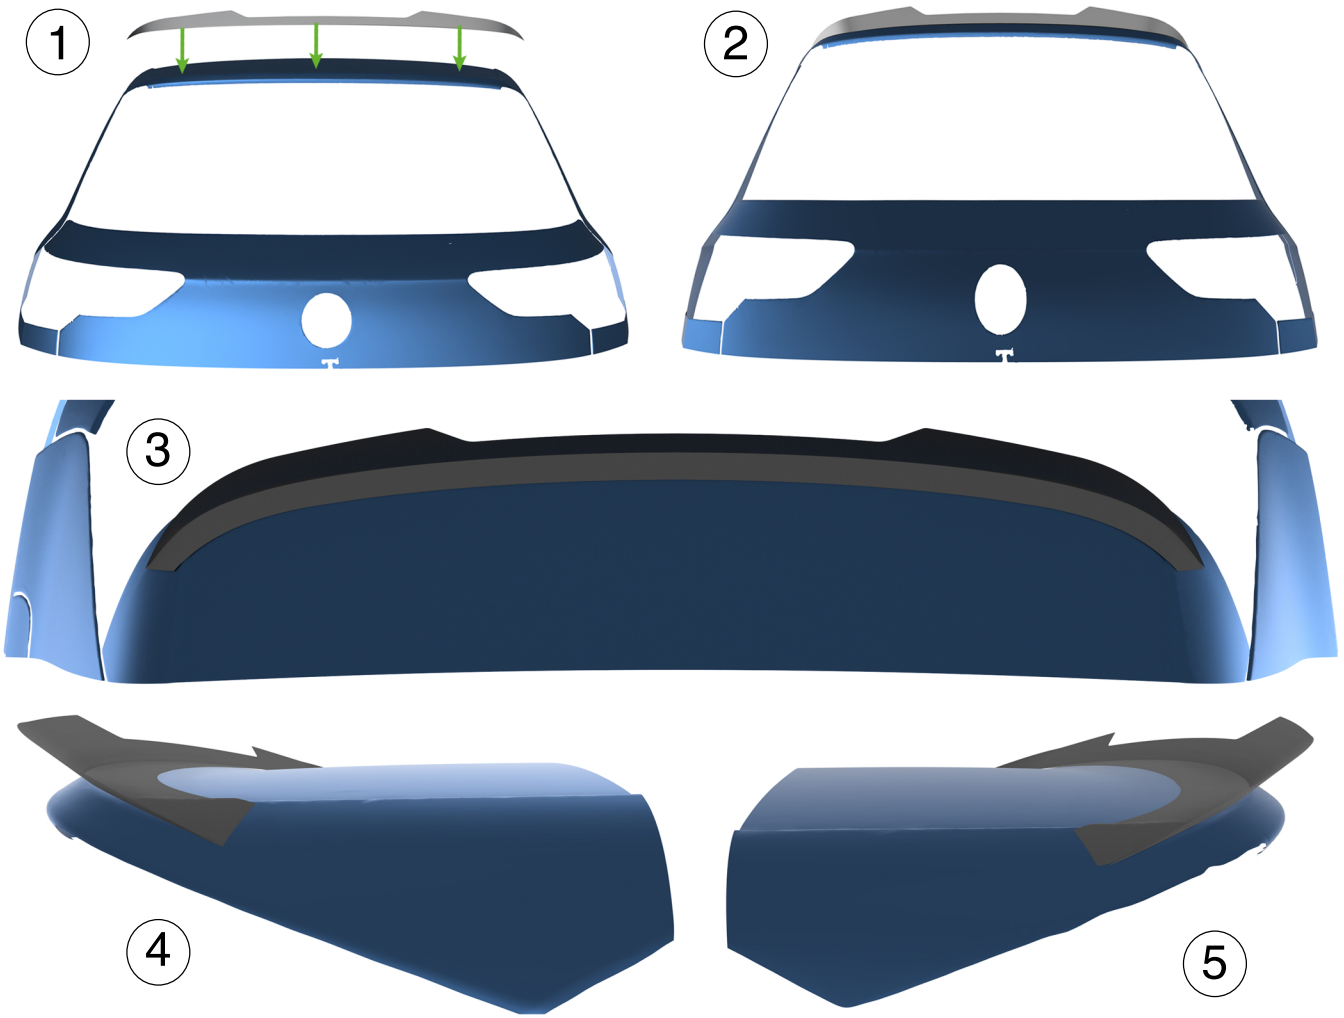

- Clean the surface and wipe 1 time with primer wipe.
- Remove the 3M tape protection from the bottom of the product.
- Align he product evenly on the surface as indicated in the images.
- Remove the protection film on the product.

NOTES:

Do not wash your vehicle 24 hour safter instalation.

ONEWAY